


## REFERENCE DIAGRAM

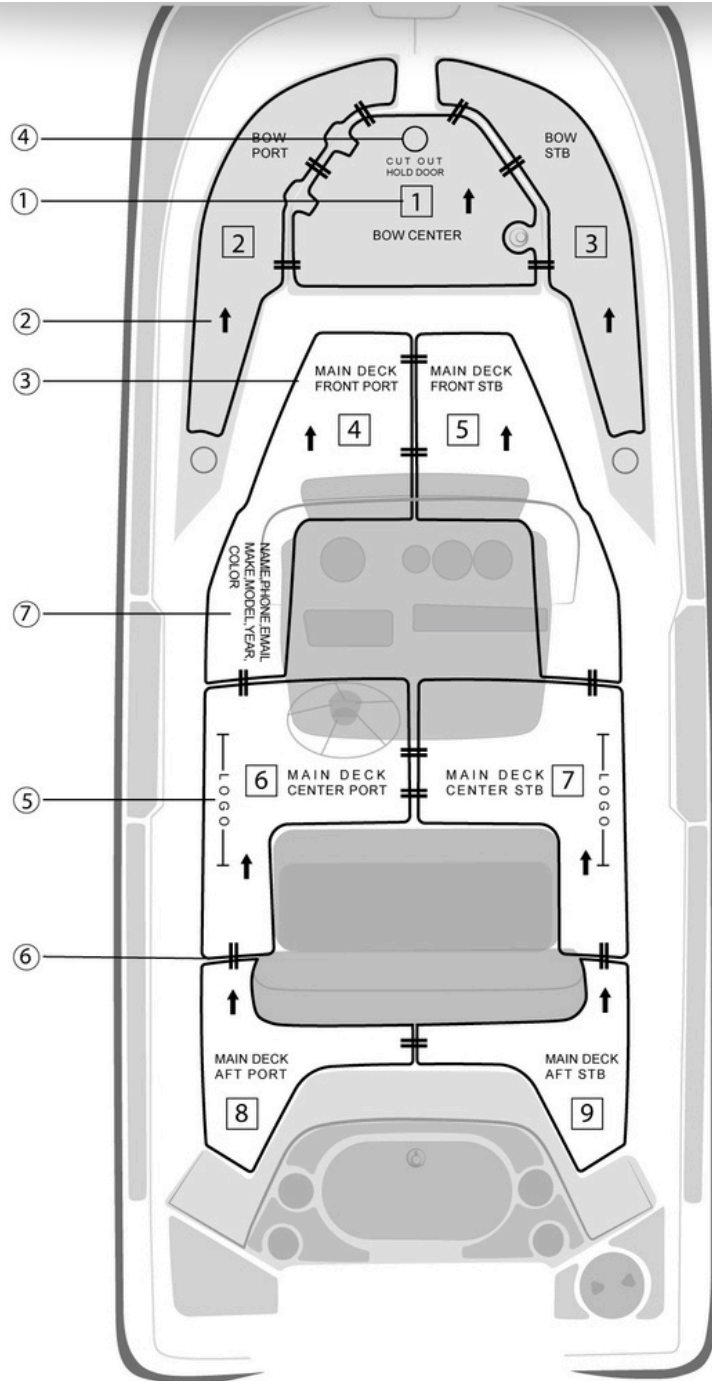

## HOW TO PATTERN YOUR BOAT

### **Within the kit we have sent you, we have included:**

- Templating film
- A permanent marker
- A plastic straight edge ruler

### **You will also need:**

- A pair of scissors
- Masking or painters tape
- A camera or phone to take pictures of your pattern layout

### **Step 1:**

First, cover the area to be patterned with your templating film. Using your scissors, begin trimming your plastic film so it is slightly larger than the area to be covered. Where two pieces of patterning film need to be joined, make sure you overlap them and tape them together with masking tape.

### **Step 2:**

Then secure the film in place using either weights or your masking/painter's tape. This will ensure the film will stay in place during the templating process.

### **Step 3:**

This step will differ depending on whether the area you are templating is a smooth surface or if it has a raised non-skid area moulded into the fibreglass deck. For borders with raised non-skid areas, use your permanent marker to trace around the raised area of the deck. You can use a ruler or straight edge to produce sharper lines. For a boat which has a smooth surface, simply use your permanent marker to draw the lines in the desired area you'd like your Aquadeck flooring to cover. If the area you are templating is close to an area that curves upwards or downwards. Keep your lines on the flat portion of the floor and avoid drawing on the curve. Once done, number each part clearly. See number 1 on the diagram provided.

## HOW TO PATTERN YOUR BOAT

### **Step 4:**

It is important to mark each part of the pattern with an arrow pointing towards the front of the boat. See number 2 on the diagram provided.

### **Step 5:**

Mark clearly the top surface of all the parts. Be sure to mark their exact location on your boat. For example, bow port, bow STB, bow centre. See number 3 on the diagram provided.

### **Step 6:**

Next, where any holes or hinges need to be cut out, be sure to identify and label these areas. Look at diagram 4 for an example. Should you wish to add a logo, clearly label your pattern in the area where it is required with the words "LOGO". See diagram number 5 for help.

### **Step 7:**

Draw reference lines panel to panel, so that we are able to line up your template correctly once it arrives at our workshop. It is essential that we are able to recreate your template accurately in our studio for the design team to process. See number 6 on the diagram for example.

### **Step 8:**

Write your name, phone number, email, boat make, model, year, colour and pattern choice and on one of your parts for reference. See number 7.

### **Step 9:**

Be sure to take lots of photographs of your template once in place on your boat. This again is essential for our design team to work accurately. Do not trim the template to the lines you have drawn. This will help the design team during the digitising process.

### **Step 10:**

Pack your template, return it to us at Aquadeck Head Office and upload your photographs to us following the instructions on our website under "Templating". Should you have any questions regarding the templating process, please feel free to contact our design team [support@aquadeck.com](mailto:support@aquadeck.com) . We are always pleased to help!